

Interior

RIDGELINE TOUCH-UP, CLEAN & CARE



04/2025 | TU EN

**Schotten
& Hansen**

Nature Refined.

CONTENT

1.	TOUCH-UP	3
1.1	Material overview	3
1.2	Touch-Up of cut edges	4
1.3	Touch-Up of surfaces	5
2.	CLEANING AND CARE	7
2.1	Cleaning	7
2.2	Care	7

Ridgeline

The Ridgeline surface is ready for use and generally requires no further treatment or maintenance after installation. However, it may be necessary to clean and/or adjust the colour of Ridgeline surfaces („Touch-Up“) both during the installation of the panels and during the life of the product.

Such cases may include, for example, the following:

- Stains on the surface
- Light saw cuts or veneer chipping caused by sawing panels to size during installation
- Deep scratches or cuts extending through the coloured wood layer

The materials and procedures required to repair, clean and maintain Ridgeline panels are explained below.

1. TOUCH-UP

1.1 Material overview

- Schotten & Hansen Touch-Up Ridgeline

Touch-Up Ridgeline is a ready to use colour mix to match the colour of the Ridgeline surface. It is available in various sizes and can be used to match cut edges and surface damage.

- Schotten & Hansen Polish Accelerator

Polish Accelerator is a care product that creates a protective layer of natural oils on surfaces and should be used after Touch-Up to protect the colour. CAUTION: Dispose of cloths soaked in Polish Accelerator in a fireproof container as there is a risk of spontaneous combustion!

- Schotten & Hansen Wood Soap

Wood Soap is a cleaning and care product which effectively removes dirt from wooden surfaces and at the same time has a light care effect.

For the Touch-Up you need:

- 60 grit sandpaper
- Natural fibere brush
- Fine brush
- Touch-Up Ridgeline
- Polish Accelerator
- Disposable paper towels
- Beige or white polishing pad


Ridgeline

1.2 Touch-Up of cut edges

1. Roughen the flush-sawn, clean cut edge with 60 grit sandpaper. Brush out the resulting dust with a clean natural fibre brush.



2. Apply Touch-Up Ridgeline with a pen (20 mL) or brush.
Recommendation: Apply with the pen, then remove excess with a brush.

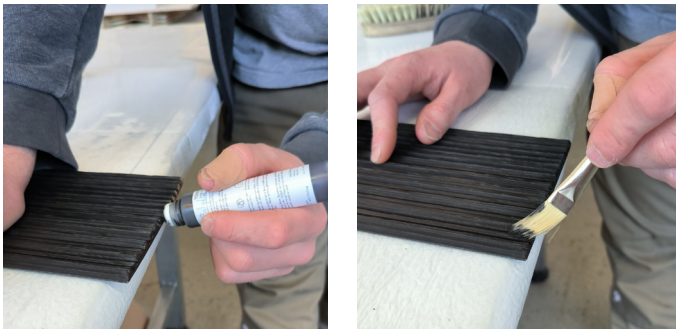


3. Allow the edge to dry for at least 1 hour.
4. Apply a thin layer of Polish Accelerator to the edge. Use a disposable paper towel or a clean brush. This will protect the colour.
5. Allow Polish Accelerator to dry for at least 4 hours.
6. Dry-polish the treated area with a white or beige polishing pad to even out any differences in gloss.

Ridgeline

1.3 Touch-Up of surfaces

1. Clean the damaged area and the surrounding spaces with a clean natural fibre brush to remove dust and dirt.

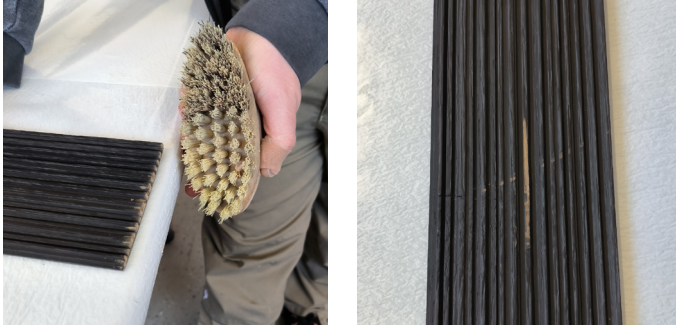

2. Apply a thin layer of Touch-Up Ridgeline to the damaged areas with a fine brush and remove excess with a disposable paper towel.




3. Allow to dry for at least 1 hour.
4. Dry polish the treated area with a white or beige polishing pad to even out any differences in gloss.




Ridgeline

5. Apply a thin layer of Polish Accelerator to the Panel. Use a disposable paper towel or a clean brush. This will protect the colour.

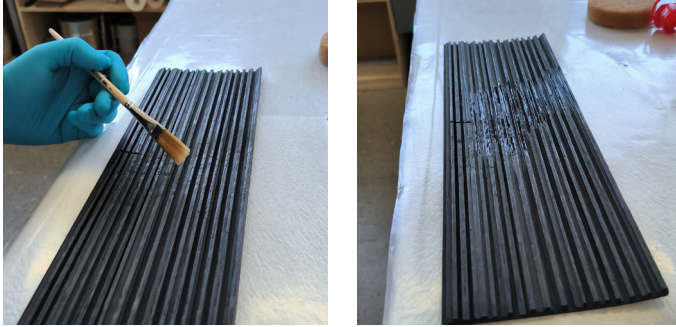

6. Allow Polish Accelerator to dry for at least 4 hours.

7. Dry polish the treated area with a white or beige polishing pad to even out any differences in gloss.

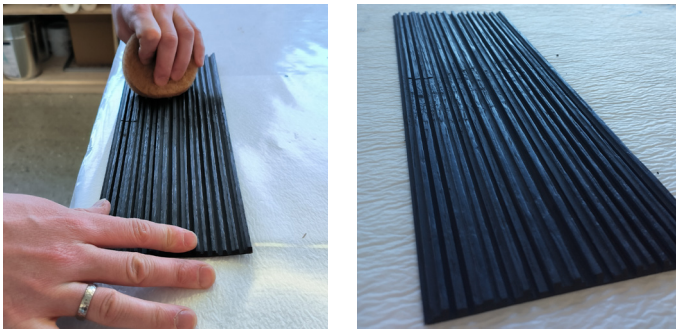

Ridgeline

2. CLEANING AND CARE

2.1 Cleaning

For this you need:

- Schotten & Hansen Wood Soap
- Hot water
- A small, clean cleaning bucket
- Cotton cloth
- Beige or white polishing pad

Clean stains with Schotten & Hansen Wood Soap:

1. Prepare a cleaning solution using Wood Soap and hot water (mixing ratio: see label).
2. Soak the cotton cloth with the cleaning solution.
3. Wipe the surface well with a damp cloth. If necessary, leave to soak and wipe again.
4. After cleaning, wipe off any remaining moisture with a dry, lint-free cloth.
5. Allow to dry for at least 1 hour.
6. Dry-polish with a white or beige polishing pad (creates shine on the heights).

2.2 Care

For this you need:

- Schotten & Hansen Polish Accelerator
- Wide brush
- Disposable paper towels
- Beige or white polishing pad

Apply Polish Accelerator to the cleaned surface:

1. Apply Polish Accelerator evenly and very thinly with a wide brush. There should be no excess liquid in the depths. If there is, remove it (e.g. with an absorbent cloth or by tilting the panels).
2. Allow the treated panels to dry for at least 4 hours until there are no more traces to touch.
3. Dry polish with a white or beige polishing pad (creates shine on the heights).

If you have any further questions about the use of our products, please contact our service team:
service@schotten-hansen.com or call: +49 8861 908 04 152

**Schotten
& Hansen**

Schotten & Hansen GmbH, August-Moralt-Straße 1, 86971 Peiting,
T +49 8861 90 80 40, kontakt@schotten-hansen.com, www.schotten-hansen.com